

总尺寸：240x120mm（折起尺寸60x120mm）


材质：105g哑粉纸，过哑油

8P 三折页，单色

240mm

60mm

120mm

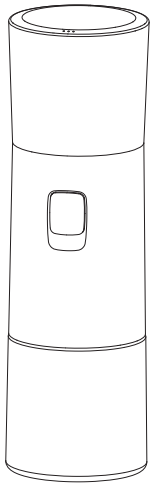

POCKET ESPRESSO MACHINE
USER MANUAL

Safety precautions

- To avoid accidents caused by improper use, such as electric shock and fire disaster, please read through the user manual carefully before using the machine and keep it for further reference.
- Before operating the machine, please master how to operate and use it. Please consult the user manual carefully in order to grasp the contents contained therein.
 - After unpacking, check if the machine is intact and if there are complete accessories.
 - Please use the machine on the premise of ensuring it is intact and free of any damage. If the machine is damaged, consult the manufacturer or the professionals from its maintenance department or similar department for replacement, in order to avoid danger.
 - Keep the packaging bag and accessories beyond children's reach.
 - Do not expose the machine to fire or under direct sunshine or high temperature.
 - Do not put the machine in cooking range, oven, microwave oven or dish-washing machine.
 - Use mineral water or purified water.
 - When using the machine, ensure it is fully rotated to avoid water leakage.
 - Do not soak the machine in water.

Battery and charging

- Do not dismantle, repair or refit the battery.
- Do not charge it in the region near the heat source or in humid place (such as heat radiator, bathroom, etc.)
- Do not wipe the machine with wet cloth during the charging process.
- Stop using the machine immediately, if the charging cable is damaged or broken.
- If the machine will not be used for a long time, pull out of the charging cable after the machine is fully charged and place it in a dry and cool site. Please charge the machine for every 3 months at least to avoid lack of electricity.
- Whoever other than professionals cannot dismantle the machine, for it may lead to risks, such as short circuit. Instead, send it to professional repairing outlet or professional recycling agency for dismantling it.
- Please dispose of the battery safely.

Transportation



- Please transport the machine with the original packaging box and ensure it has been powered off prior to transport.

Caution

- Improper use may lead to empyrosis.
- When adding hot water, ensure the machine is placed stably to avoid the risks of water splashing and empyrosis.
- Do not uncup the machine when it is working to avoid empyrosis.
- Do not take out of the used capsule until extraction is done for a certain period of time, in order to avoid empyrosis.
- Please use an adapter that has CE certification and meets the charging parameters of this product to charge it.

machine Introduction

Note: Coffee capsule is not included in the delivery configuration.

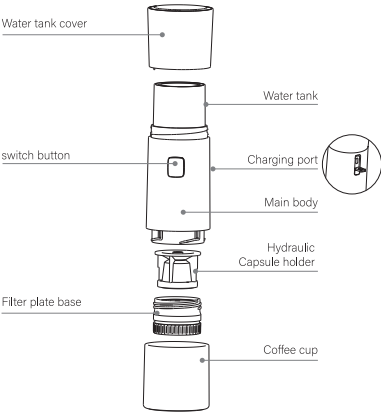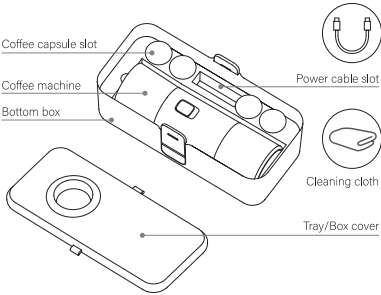

My Barista


Basic Functions of the machine

1. Coffee extraction (heating)


Hold the cup firmly and unscrew the coffee cap by rotation clockwise;




Take out of the capsule cup and filter plate base from the lower end of the cup;

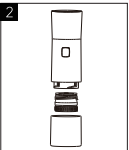


Take out of the capsule cup, put the capsule inside the capsule cap and then place the filter plate base;

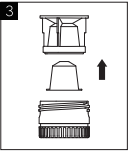

Align the clip of the filter plate base to the slot at the lower end of the cup, push it gently upward and rotate the filter plate base anticlockwise to install it at the lower end of the cup;

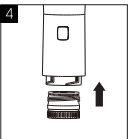


Hold the cup firmly and fasten the coffee cup through rotation anticlockwise;

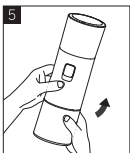


Unscrew the water tank cover, add water into the water bin until reaching RIS or EPS scale mark and then screw the water tank cover;



Click the button to display the battery level while double click to start extraction; press and hold the button to start heating.
Under heating status, heating is finished after the machine beeps (92 °C) for three times. Double click for extraction.
Note: During heating or extraction process, click again or double click or press and hold the button to stop heating or extraction.

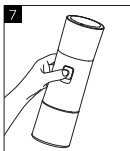

Place the machine and coffee cup on the tray respectively to enjoy the coffee.

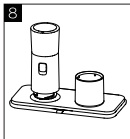

2. Dry burning exception reporting function

If the water bin has no water, press and hold the heating button. After exception is detected by the program, the buzzer will beep for a long time for 3 times and the red indicator will be normally on. The red indicator will be off in 3s.

3. Charging display function

If the white indicator is normally on after clicking the button, it indicates full battery level and above 2 cups of coffee can be made by heating;

If the red indicator is normally on after clicking the button, it indicates power battery level and 1 cup of coffee can be made by heating;

If the red indicator flashes after clicking the button, it indicates serious low battery level, which does not support heating;

If the white indicator (breathing light) is on after double clicking the button, it indicates the machine is extracting coffee;

If the white indicator (breathing light) is on after pressing and holding the button, it indicates the machine is heating coffee.

5. Operation cancellation

During the heating or extraction process, stop heating or extraction by single or double click or pressing and holding the button.

Method of Making Beverage

Ristretto

Ingredients: 1 coffee capsule, normal temperature water or hot water

Steps:

1. Put the coffee capsule into the capsule cup of the machine;
2. Add hot water (direct extraction) or normal temperature water (heating extraction) until reaching ESP scale mark of the water bin;
3. Double click to start extraction or press and hold On/Off button for heating first and then double click the button for extraction;
4. Ristretto can be served.



Espresso

Ingredients: 1 coffee capsule, normal temperature water or hot water

Steps:

1. Put the coffee capsule into the capsule cup of the machine;
2. Add hot water (direct extraction) or normal temperature water (heating extraction) until reaching ESP scale mark of the water bin;
3. Double click to start extraction or press and hold On/Off button for heating first and then double click the button for extraction;
4. Espresso can be served.



Americano

Ingredients: 1 coffee capsule, normal temperature water or hot water

Steps:

1. Put the coffee capsule into the capsule cup of the machine;
2. Add hot water (direct extraction) or normal temperature water (heating extraction) until reaching ESP scale mark of the water bin;
3. Double click to start extraction or press and hold On/Off button for heating first and then double click the button for extraction;
4. Add 80ml normal temperature water or hot water in the made coffee;
5. Americano can be served.



Latte

Ingredients:

1 coffee capsule, normal temperature water or hot water and 80ml milk

Steps:

1. Put the coffee capsule into the capsule cup of the machine;
2. Add hot water (direct extraction) or normal temperature water (heating extraction) until reaching ESP scale mark of the water bin;
3. Double click to start extraction or press and hold On/Off button for heating first and then double click the button for extraction;
4. Add 80ml milk in the made coffee;
5. Latte can be served.



Basic Parameters

Machine Name	Pocket Espresso Machine
Model	CN-HM01
Working voltage	12V==
Battery pack	18650-3S1P 10.8V 2.6Ah 28Wh
Rated input	5V==1.5A 9V==3A 12V==1.5A 20V==1.5A
Input voltage	5-20V==
Input current	1.5-3A
Operating power	130W
Operation convenience	One-button extraction
Tank volume	60mL
Waterproofing grade	IPX3
Material	PC, PA+GF, silica gel and SS316
Size	Φ72.5mm×237mm
Weight	Net weight: 0.8kg

TROUBLE SHOOTING

Fault	Solutions
Water leaks along the seam between the coffee making component and the fixing bracket of cup	Check if the coffee making component is fastened or screwed. Check if the seal ring of the coffee making component is installed correctly, deforms or is lost, which will lead to the failure of sealing under high pressure status.
Failure to work normally or make coffee	Check if there is any water in the water bin. If not, the buzzer will beep for a certain period of time for 3 times and the red indicator will be normally on for 3s. Check if the battery has power. If the red indicator keeps flashing, it indicates serious low battery level, please charge the machine as soon as possible. Check if the coffee capsule is proper. Please use proper capsules.