

总尺寸：240x120mm（折起尺寸60x120mm）


材质：105g哑粉纸，过哑油

8P 三折页，单色

240mm

60mm

120mm

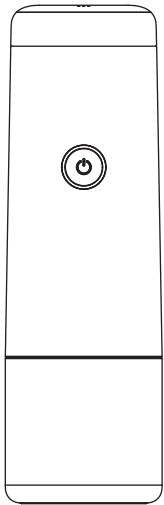

POCKET ESPRESSO MACHINE
USER MANUAL

Safety Instructions

- To avoid electric shock, fire, or other accidents caused by improper use, please read this manual carefully before using the product and keep it for future reference.
- Before operating this machine, ensure you understand how to use it properly. Read this manual carefully and fully understand its contents.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are supervised or instructed concerning use by a person responsible for their safety.
 - This appliance is intended for use in household and similar environments, such as: Staff kitchen areas in shops, offices, and other working environments; Farmhouses; By guests in hotels, motels, and other residential-type environments; Bed and breakfast type environments.
 - Do not immerse the appliance in water.
 - Do not place the coffee machine inside a cabinet during use.
 - Cleaning and maintenance must be carried out under adult supervision. Children must not operate the appliance alone.
 - This appliance is designed with a built-in structure; the battery cannot be replaced by the user.
 - Do not allow water, oil, or other liquids to enter the power socket, control panel, or connectors to avoid short circuits.
 - Surfaces that come into contact with food (such as the water tank and coffee cup) should be cleaned with a neutral detergent and a soft cloth. Do not use steel wool, strong acids, or alkalis. Do not immerse the appliance as a whole.
 - Do not operate the machine without water, do not cover the steam outlet, and do not allow children to operate it alone. Improper use may cause burns or damage to the appliance.
 - Heating elements remain hot after use. Do not touch immediately; allow to cool before cleaning or storing. After unpacking, check whether the appliance is intact and whether all accessories are complete.
 - Use the appliance only when it is in good condition. If it is damaged, it must be replaced by the manufacturer, its service department, or similarly qualified persons to avoid hazards.
 - Keep packaging materials and accessories out of the reach of children.
 - Do not expose the appliance to fire, direct sunlight, or high temperatures.
 - Do not place the coffee machine on stoves, in ovens, microwaves, or dishwashers. Use mineral water or purified water.
 - Ensure the coffee machine is properly tightened during use to prevent leakage.

Caution

- Improper use may result in burns.
- When adding hot water, ensure the appliance remains stable at all times to prevent splashing and the risk of burns.
- Do not open the lid during extraction to avoid burns.
- After extraction, wait a moment before removing the used capsule to avoid burns.

Battery and Charging


- Do not disassemble, repair, or modify the battery by yourself.
- Do not charge the appliance near heat sources or in humid areas (such as near radiators or in bathrooms). Do not clean the product with a wet cloth while it is charging.
- If the charging cable is damaged or broken, stop using it immediately.
- If the product will not be used for a long time, fully charge it, unplug the charging cable, and store it in a cool, dry place. Recharge at least once every 3 months to prevent battery damage.
- Non-professionals must not disassemble the device, as it may cause short circuits or other safety risks. Please take the product to an authorized service center or a specialized recycling facility for battery removal and proper disposal.

Transportation


If the product needs to be transported, it is recommended to use the original packaging and ensure the appliance is powered off.

Machine Introduction

Note: Coffee capsule is not included in the delivery configuration.

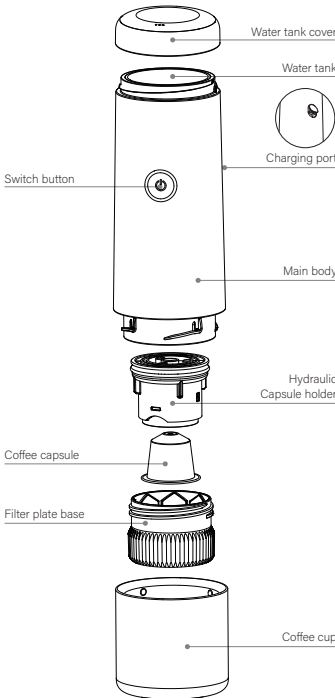

Cleaning Procedure

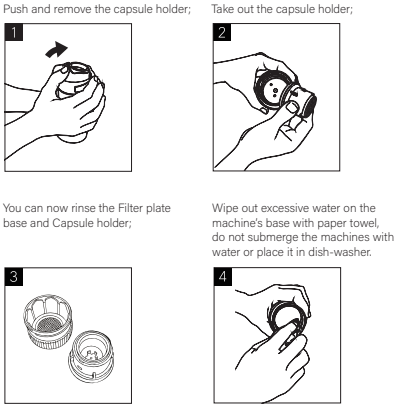

Basic Parameters

Machine Name	Pocket Espresso Machine
Model	CN-HM201
Working voltage	12V==
Operating power	130W
Operation convenience	One-button extraction
Tank volume	60mL
Waterproofing grade	IP67
Material	PC, PA+GF, Silicone, SUS316
Size	ø69 mm x 224.5 mm
Weight	Net weight: 763 g


Basic Functions of the machine

1. Coffee extraction (heating)

Hold the cup firmly and unscrew the coffee cap by rotation clockwise;




Take out of the capsule cup and filter plate base from the lower end of the cup;

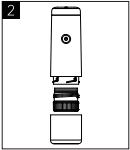


Take out the capsule cup and insert the capsule into the filter holder in the correct direction (no need to peel off the foil).




Align the clip of the filter plate base to the slot at the lower end of the cup, push it gently upward and rotate the filter plate base anticlockwise to install it at the lower end of the cup;

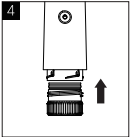

Hold the cup firmly and fasten the coffee cup through rotation anticlockwise;

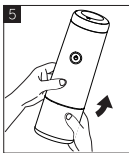

Unscrew the water tank cover, add water into the water bin until reaching RIS or EPS scale mark and then screw the water tank cover;

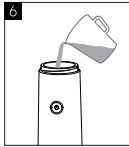

Single click to display battery level, double click to start extraction; long press for 2 seconds to start heating (long beep), white light flashes during heating; when temperature reaches 92 ± 3°C, triple beep indicates heating complete, then double click again to start extraction; after extraction, short triple beep and all lights turn off.

Note: Single click during heating or extraction to stop.



Cold Brew Mode:

When water temperature are lower than 60 degrees, when double click to start extraction without heating up the water, the machine will automatically switch to Cold Brew Mode, brewing will be significantly slower and coffee will appear to be dripping down; after extraction, short triple beep and all lights turn off. Cold brew coffee are best serve with ice and you will expect a less bitter and much smoother taste.

2. Dry burning exception reporting function

When the water tank is empty, long press the button for 2 seconds. The buzzer emits a long beep and the white LED flashes as heating begins. If the temperature rises more than 5°C within 5 seconds, or the NTC temperature exceeds 105°C, the system detects dry heating. The buzzer then emits three long beeps, and the red LED stays on for 3 seconds before turning off.

3. Charging display function

The white indicator flashes during the charging process but is normally on after charging is done. It will be off after pulling out of the charging cable.

4. Descriptions of indicators

If the white indicator is normally on after clicking the button, it indicates full battery level and above 2 cups of coffee can be made by heating; If the red indicator is normally on after clicking the button, it indicates power battery level and 1 cup of coffee can be made by heating; If the red indicator flashes after clicking the button, it indicates serious low battery level, which does not support heating; If the white indicator (breathing light) is on after double clicking the button, it indicates the machine is extracting coffee; If the white indicator (breathing light) is on after pressing and holding the button, it indicates the machine is heating coffee.

5. Pump Blockage Alarm

If no coffee is extracted for an extended time during brewing, the machine emits two short beeps and the red LED stays on for 3 seconds, then stops working.

6. Heating Timeout Alarm

If the set temperature is not reached within 5 minutes and 30 seconds, heating stops automatically. The machine emits three short beeps, and the red LED flashes 6 times at 1Hz, then turns off.

Method of Making Beverage

Ristretto

Ingredients: 1 coffee capsule, normal temperature water or hot water

- Steps:
1. Put the coffee capsule into the capsule cup of the machine;
 2. Add hot water (direct extraction) or normal temperature water (heating extraction) until reaching RIS scale mark of the water bin;
 3. Double click to start extraction or press and hold On/Off button for heating first and then double click the button for extraction;
 4. Ristretto can be served.



Espresso

Ingredients: 1 coffee capsule, normal temperature water or hot water

Steps:

1. Put the coffee capsule into the capsule cup of the machine;
2. Add hot water (direct extraction) or normal temperature water (heating extraction) until reaching ESP scale mark of the water bin;
3. Double click to start extraction or press and hold On/Off button for heating first and then double click the button for extraction;
4. Espresso can be served.



Americano

Ingredients: 1 coffee capsule, normal temperature water or hot water

Steps:

1. Put the coffee capsule into the capsule cup of the machine;
2. Add hot water (direct extraction) or normal temperature water (heating extraction) until reaching ESP scale mark of the water bin;
3. Double click to start extraction or press and hold On/Off button for heating first and then double click the button for extraction;
4. Add 80ml normal temperature water or hot water in the made coffee;
5. Americano can be served.



Latte

Ingredients:
1 coffee capsule, normal temperature water or hot water and 80ml milk

Steps:

1. Put the coffee capsule into the capsule cup of the machine;
2. Add hot water (direct extraction) or normal temperature water (heating extraction) until reaching ESP scale mark of the water bin;
3. Double click to start extraction or press and hold On/Off button for heating first and then double click the button for extraction;
4. Add 80ml milk in the made coffee;
5. Latte can be served.



TROUBLE SHOOTING

Fault	Solutions
Water leaks along the seam between the coffee making component and the fixing bracket of cup	Check if the coffee making component is fastened or screwed. Check if the seal ring of the coffee making component is installed correctly, deforms or is lost, which will lead to the failure of sealing under high pressure status.
Failure to work normally or make coffee	Check if there is any water in the water bin. If not, the buzzer will beep for a certain period of time for 3 times and the red indicator will be normally on for 3s. Check if the battery has power. If the red indicator keeps flashing, it indicates serious low battery level, please charge the machine as soon as possible. Check if the coffee capsule is proper. Please use proper capsules.