

总尺寸：240x120mm（折起尺寸60x120mm）

材质：128g双铜

8P 三折页 单黑

240mm

60mm

120mm


My Barista

IMPORTANT SAFEGUARDS

- When using electrical appliances, basic safety precautions should always be followed, including the following:
- Read all instructions carefully before using any electrical appliance.
 - Ensure that the voltage indicated on the rating label matches the household mains voltage.
 - Improper operation or misuse may damage the appliance and/or cause personal injury.
 - This appliance is intended for household use only. Commercial use will void the warranty. The supplier assumes no liability for damage or injury caused by unintended use.
 - Avoid contact with any moving parts.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Regularly inspect the power cord and plug for damage. If damaged, they must be replaced by the manufacturer, its service agent, or similarly qualified personnel to avoid hazards.
 - Do not use the appliance if it has been dropped or damaged in any way. If damage occurs, take the appliance to an authorized service center for inspection and/or repair.
 - To reduce the risk of electric shock, do not immerse the motor unit, plug, or power cord in water or any other liquid.
 - Do not immerse the appliance base in water or any other liquid during cleaning.
 - Always unplug by holding the plug. Do not pull on the power cord to disconnect the appliance from the power supply.
 - Unplug the appliance when not in use, before cleaning, and before assembling or disassembling parts.
 - The use of accessories not recommended or supplied by the manufacturer may result in personal injury, fire, or electric shock.
 - A short power cord is provided to reduce the risk of entanglement or tripping over a longer cord.
 - Do not let the power cord hang over the edge of a table or countertop, or place it where it may be accidentally pulled.
 - Do not allow the power cord to contact hot surfaces or place it near or on a gas stove, electric burner, or in a heated oven.
 - Do not use the appliance on or near a gas stove, electric stove, or open flame.
 - The use of an extension cord is not recommended. If necessary, ensure the extension cord is rated appropriately for the appliance to prevent overheating. Keep it out of reach of children and pets and away from tripping hazards.
 - This appliance is not intended for outdoor use. Do not use it for purposes other than its intended use.
 - Do not carry the appliance by the power cord.
 - Do not leave the appliance unattended during operation. Always unplug it when not in use or before cleaning.
 - Always operate the appliance on a flat, level, and stable surface. Do not place it on hot surfaces.
 - The manufacturer assumes no liability for damage or injury caused by improper use, misuse, or unauthorized repair.
 - In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return it to an authorized service center for inspection, adjustment, or repair using original spare parts only. Failure to follow these precautions may affect safe operation.
 - Allow the appliance to cool to room temperature before using it again.
 - Use only with the dedicated base provided.
 - This product is intended for indoor household milk frothing only. Commercial use, outdoor use, or heating/stirring non-dairy liquids (such as oil or soup) is strictly prohibited to prevent fire or damage.

- After milk frothing, pour milk slowly and steadily. Do not pour rapidly or shake the cup forcefully, otherwise the milk frothing whisk may be poured into the serving container together with the milk foam, posing a risk of accidental ingestion.
- Do not touch the jug during heating. After heating, do not touch the heating plate surface. Improper operation may cause burns. Please read the instruction manual carefully before use.
- The Milk frothing whisk/Hot milk whisk may pose a choking hazard. Keep out of reach of children.
- The heating element surface is subject to residual heat after use, Warning of potential injury from misuse.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

DESCRIPTION OF PARTS

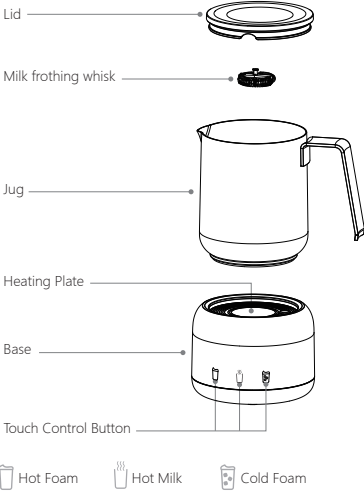

MILK FROTHER
USER MANUAL



CN-MF602

封底

封面

OPERATING INSTRUCTIONS

- 1 Plug in the appliance.
- 2 Place the Milk Frothing Whisk correctly in the jug, pour in the required amount of milk, and secure the cup lid.
- 3 Touch the mode button to select the desired function, then touch the start/stop button to start operation.
- 4 The indicator light of the selected mode will flash at approximately 1Hz/s while the appliance is performing the function.
- 5 When the operation is complete, all buttons light will remain steadily on, indicating that frothing is finished.
Note: Do not pour the Milk Frothing Whisk into the drinking cup when dispensing beverages!

FUNCTION DESCRIPTION

1.Button Function Description

- When no jug is placed, the Hot Milk Froth and Cold Milk Froth touch buttons flash alternately and cannot be operated.
- When the jug is correctly placed, the Hot Milk Froth, Cold Milk Froth, and Hot Milk buttons stay on and can be operated.
- When a mode is selected, its button flashes while the others turn off, and the appliance starts operating in the chosen mode.

2.Hot Milk Froth Function

- Place the Milk Frothing Whisk in the jug, pour in the required amount of milk, and secure the jug lid.
- Briefly press the Hot Milk Froth button; the selected button flashes at 1 Hz, and the milk frother starts heating and whisking.
- When the target temperature is reached, the milk frother stops; all buttons stay on, indicating the process is complete. The jug now contains hot milk froth.

3.Cold Milk Froth Function

- Place the Milk Frothing Whisk in the jug, pour in the required amount of milk, and secure the jug lid.
- Briefly press the Cold Milk Froth button; the selected button flashes at 1 Hz, and the milk frother starts whisking.
- When the set time is reached, the milk frother stops; all buttons stay on, indicating the process is complete. The jug now contains cold milk froth.

4.Hot Milk Function

- Place the Milk Frothing Whisk in the jug, pour in the required amount of milk, and secure the jug lid.
- Briefly press the Hot Milk button; the selected button flashes at 1 Hz, and the milk frother starts heating.
- When the set temperature is reached, the milk frother stops; all buttons stay on, indicating the process is complete. The jug now contains hot milk.

5.Energy-Saving Mode

- If no operation is performed within 5 minutes after the milk frother is powered on, it enters energy-saving mode with a power consumption of 0.5 W. (Note: Touch any button to wake up the appliance.)

6.Overuse Alarm

- After the milk frother has been operating continuously for 30 minutes, the Hot Milk Froth and Cold Milk Froth buttons flash at 2 Hz for 2 seconds, then pause for 1 second, repeating this pattern. The milk frother must rest for 10 minutes before returning to standby mode. (Note: Continuous operation is defined as two consecutive cycles with pauses of ≤ 3 minutes between them.)

7.NTC Error Alarm

- When the NTC sensor is in an error state, the milk frother stops operating and triggers an alarm. The Hot Milk Froth, Hot Milk, and Cold Milk Froth buttons flash continuously at 3 Hz, indicating a malfunction. Contact a qualified service technician for assistance.

BASIC SPECIFICATIONS

Product Name	Milk Frother
Product Model	CN-MF602
Rated Voltage	220-240V
Rated Power	500-600W
Rated Frequency	50-60Hz
Operating Method	Touch Control
Material	SUS304, AS, Aluminum
Product Dimensions	L151mm*W108mm*H189mm
Product Weight	0.8 kg
Max. Capacity	150 ml
Operating Temperature Range	5-40°C

FUNCTION CHART

Function	Milk (ml)	Temperature (°C)	Time (s)	Milk frothing whisk
Hot Foam 	100ml	65°C±5°C	120±60s	
	120ml	65°C±5°C	150±60s	
	150ml	65°C±5°C	180±60s	
Cold Foam 	100ml	/	120s	
	120ml	/	120s	
	150ml	/	120s	
Cold Foam 	100ml	65°C±5°C	120±60s	
	120ml	65°C±5°C	150±60s	
	150ml	65°C±5°C	180±60s	
It is recommended to use chilled milk (at 5°C - 10°C). The heating time for hot milk froth will vary depending on the initial temperature of the milk (measured by the final heating temperature).				