 


CAPSULE COFFEE MACHINE INSTRUCTION MANUAL LOLA

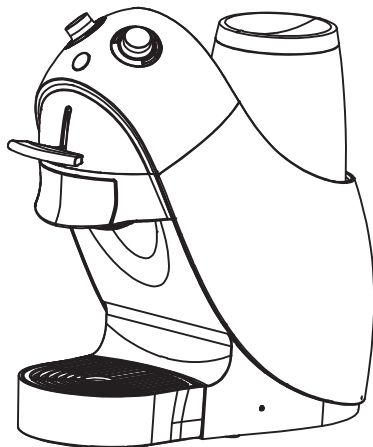

RoHS



Read this instruction manual carefully before operating this machine.

Precautions



In the event of an emergency: immediately remove plug from power socket.



The manufacturer declines any responsibility and the guarantee is rendered invalid in the event of any form of commercial use, misuse, or failure to comply with these instructions. Unplug the power cord from the wall socket if you will not be using the machine for a long period of time.



Check that the voltage quoted on the rating plate is the same as your voltage. Connect the appliance to earthed power sockets only. Any improper connection voids warranty.



Place on a flat, stable and heat-resistant work surface away from water splashes and any heat sources.



Do not use the machine if it is not in perfect working condition or if there is evidence of damage. In such cases inform the seller.



- Do not insert fingers into capsule compartment and capsule shaft, as there is danger of injury.
- Do not use the appliance without the drip tray and drip grid.
- Keep the appliance/cord out of reach of children.
- Do not fill the water tank with hot water.
- Do not immerse the machine in liquids. Risk of electric shock.
- Only use capsules intended for this appliance. If the capsule does not fit, do not force the capsule into the appliance.
- **WARNING:** To avoid the risk of injury, do not open the brew chamber during the brew process.



- Do not place the power cord near hot parts or sharp objects, etc.
- Do not hang power cable (risk of tripping)
- Do not touch the power cable wet-handed.
- Do not plug off by pulling the power cable.



Do not open the appliance or insert anything into the openings. All actions other than normal use, cleaning and care must be performed by the seller.



When supervised by adults and fully aware of relevant hazards, children of 8 years old and above may use the machine in a safe manner. Children under 8 years of age are forbidden to clean and maintain the machine. Keep the machine and power cable away from children less than 8 years old.



Before cleaning, unplug the appliance and let it cool down.
Never clean with wet cloth or immerse plug, cord or appliance in any liquid.
Make sure there is enough space around the machine for ventilation and also enough space both in front and behind for maintenance.



Packaging materials (plastic bags etc.) are recyclable and are potential hazards.
Keep them out of reach of children.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.
They can take this product for environmental safety.




- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance shall not be placed in a cabinet when in use.
- WARNING: to avoid spillage on the connector.
- WARNING: potential injury from misuse.
- The heating element surface is subject to residual heat after use.

Contents

Precautions	1
Product overview	4
Operating instructions	6
Functionality	9
Warning	11
Cleaning & care	13
Trouble shooting	14
Technical parameters	15

 Product overview

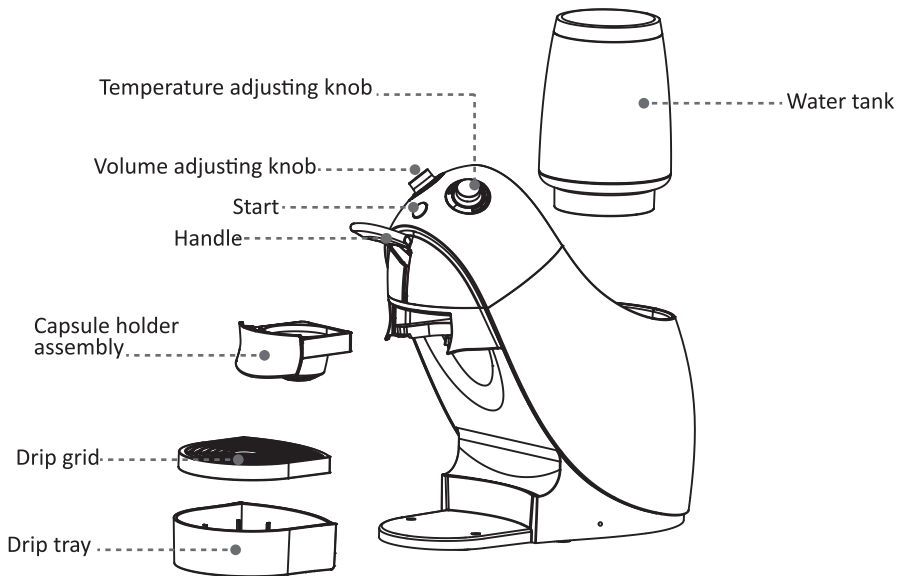


>> Indicators



Volume setting



 Temperature setting

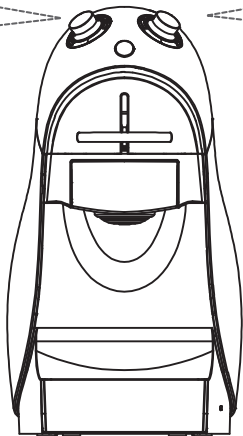

White light: 78°C



Green light: 89°C



Orange light: 91°C



Red light: 93°C



 
Blue light: 95°C

Operating instructions

»Before operating the machine




Fill up the water tank

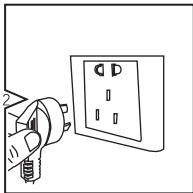


Plug the power cable and switch on power



 Place your cup and press power switch

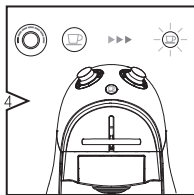

 Power switch turns green and blinks at 1Hz while cup volume key lights up(now the system starts heating up)

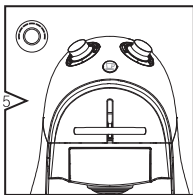

Both power switch (green) and volume key light up-heating finishes

- ▲ Do not add hot water in water tank, Hot water may crack the tank, or cause electric shock.
- ▲ Please notice the maxim and minnum water level.
- ▲ Please use designated capsules only.

 
»Ready for hot beverage



Press power switch to run a cup of water




Lift handle, pull out capsule holder to insert capsule. Fit capsule holder into position and press down handle.

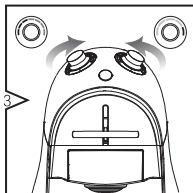

Tune the knobs to get your desired volume and temperature. Match the flavor and volume as described on the package.



 Place your cup and press power to turn on.

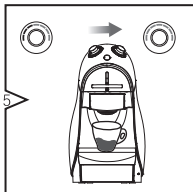


When brewing starts, the programmed volume lights go out in sequence; when brewing is done, all volume lights flash at 3 times per second.



Take out the used capsule and dispose of properly.

- ▲ The machine utilizes only specific capsule. Please consult a specialized distributor before use.
- ▲ Immediately dispose of the used capsule each time after use. Switch off the machine if you want to stop it during work.

 
»Ready for cold beverage

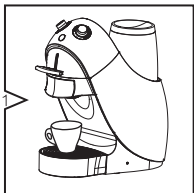

Press power switch to run a cup of water.



 
Lift handle, pull out capsule holder to insert capsule. Fit capsule holder into position and press down handle.

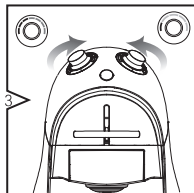

Tune the knobs to get your desired volume and temperature. Match the flavor and volume as described on the package.



 Press down handle and power to turn on.

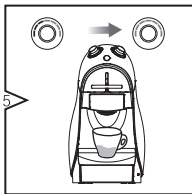


When brewing starts, the programmed volume lights go out in sequence; when brewing is done, all volume lights flash at 3 times per second.



Take out the used capsule and dispose of properly.


Functionality

 »Cup volume setting

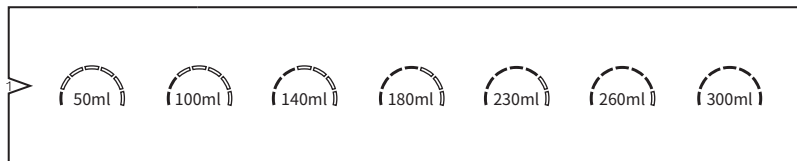


Turn the knob clockwise to increase, counter-clockwise to decrease.

 »Temperature setting

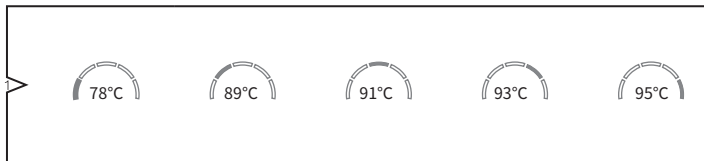


Turn the knob clockwise to increase, counter-clockwise to decrease.

 » Factory default setting

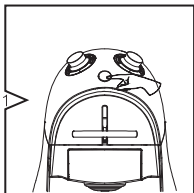


Put power off and on again to enter factory default setting.

 
» Power saving

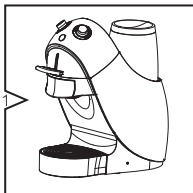

 
The system enters power saving mode if the machine is idle ten minutes.

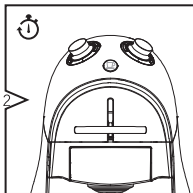

 The power key illuminates with cupvolume key blinking clockwise at an interval of 1 second on and 2 seconds off.

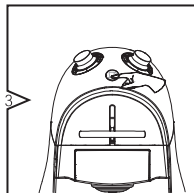

 
Press power key to leave Power Save Mode.

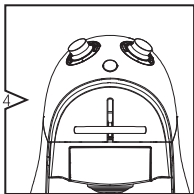


The machine will enter normal state.

Warning

 » Warning for lack of water

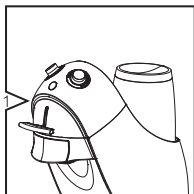

 Out of water, or water tank not in position.

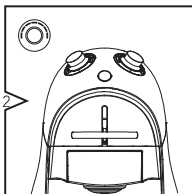


All volume lights flash at 3 times per second.

» Warning for blockage




 Unable to brew coffee when capsule is outdated or damaged.

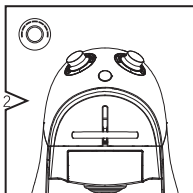


Volume lights flash in clockwise sequence at 3 times per second.

 
»Warning for excess use.

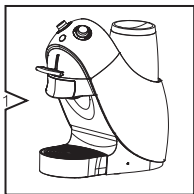

 To protect the machine, the program will automatically shut down the machine when it has continuously brewed for 2 liters of water.

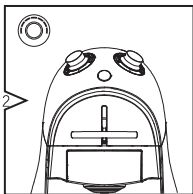

 Volume lights flash at 3 times per second.

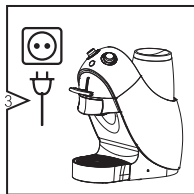

Plug off and let the machine cool down before restart again.

 
Cleaning & care

»Daily cleaning

- For descaling please add your descaler in the water tank and run a full tank out.
Refill the tank and repeat the previous step with clean water.




Do not immerse the machine in water.
Electric shock.

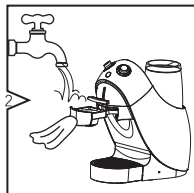

Clean the capsule cup.




 Clean drip grid and drip tray.

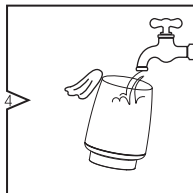


Clean water tank.

 »Maintenance

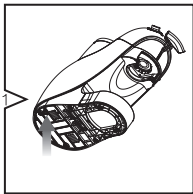

 After a period of time, take out the cleaning needle from the bottom of the machine.

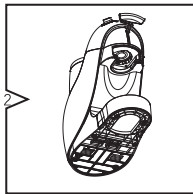

Lay the machine flat on surface.



Clean the nozzle with the needle.

Trouble shooting

- a** Indicator does not function
- ▶ - check plug.
 - check if voltage is the same as specified on rating label.
- b** Keys do not function
- ▶ - plug off and plug on again
 - call service center
- c** Handle can not be fully pressed down
- check if there is foreign matter or capsule stuck in chamber.
 - ▶ - check if the capsule is as designated.
 - call service center.
- d** Coffee flow is not stable
- check water tank and make sure it is placed in position.
 - ▶ - check capsule and make sure it is placed in position.
- e** Water, not coffee, is brewed
- ▶ - change for a new capsule.
- f** Water is not pumped
- check water tank.
 - ▶ - make sure water tank is positioned correctly.
 - nozzle blocked, use needle to clean it and run a cup of water before use.
- g** Other problems
- ▶ - call service center.

Technical parameters



See the data plate on the base of the machine

p

15 bar



~ 3.0 kg



900ml



5 °C... 40 °C



 167mm  308mm  302mm

Please search the user manual information at www.cino.cn



